49444-97193 ModB ClassRite InF 3/18/05 8:34 AM Page 1

QUALITY FEATURES FOR BETTER PICTURES, EASIER OPERATION, LONGER LIFE

InFocus®

- Exclusive Camlok Roller System
- Attractively styled
- Easily installed
- Economically priced
- Completely self-storing

OPERATING INSTRUCTIONS FOR

MANUAL WALL/CEILING SCREENS

SC-MAN WHT-84
SC-MAN WHT-100
SC-MAN WHT-120
SC-MAN GRY-92H
SC-MAN GRY-106H

InFocus Corporation
27700 SW Parkway Ave
Wilsonville OR 97070
800-294-6400
www.InFocus.com

97193 3/05

YOU HAVE MADE A WISE SELECTION…

in choosing an InFocus projection screen designed and engineered to produce the sharpest, most pleasing pictures with maximum convenience.

PROTECT YOUR SCREEN by keeping it rolled in its protective case when not in use. Always examine both front and back of surface before re-rolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster brush gently to remove foreign particles.

INSTALLATION

Care in mounting and care in correct operation will mean a long and satisfactory life for your InFocus wall/ceiling screen. Locate the screen where the audience can best see it and where other furnishings in the room permit. Mount the screen so that bottom of picture surface, when fully extended, will be above heads of viewers.

BUILT-IN HANGERS

InFocus wall/ceiling screens may be mounted on wall, map rails, suspended from ceiling or extension brackets. Wall screens must be mounted level and with the case-back parallel to the wall.

FOR WALL MOUNTING –
Use the keyhole slot at the back of the hanging bracket for flush wall suspension. Position screws or other fasteners into wall and hang screen by using slots.

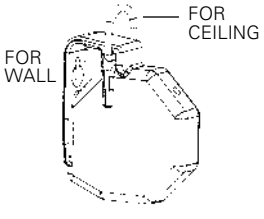

FOR MAP RAIL MOUNTING –
Use keyhole slots in flat brackets. Do not use "D" rings.

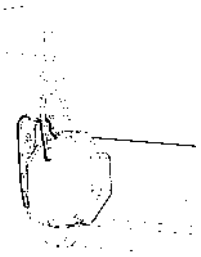

FOR CEILING SUSPENSION
If the screen is to be ceiling mounted, two screw hooks placed in a beam or other solid surface will do the job.

NOTE: Whichever method is used, the screen should be free to swing forward and back and not be anchored rigidly. Mount the screen so that bottom of picture surface, when fully extended, will be above heads of viewers.

OPERATING INSTRUCTIONS

TO LOWER PICTURE SURFACE
Pull screen down all the way. HESITATE – then allow screen to retract VERY SLOWLY until it locks in place.

TO RAISE PICTURE SURFACE
Pull down on the pull bail, then raise quickly, as a window shade. Keep control of the picture surface. Do not allow it to roll uncontrolled into the case or damage is sure to result.